16. Common problem solving guidelines:

Question	Reason	Solution
The aircraft indicator light is flashing and there is no response to the operation	1. The aircraft and the remote controller are not successfully paired 2. The aircraft battery is low	1.Re-bind the aircraft with the remote controller 2.Charge the battery
Aircraft flashes intermittent sounds	1. Low battery 2. Blade deformation	1.Charge the battery 2. Replace the rotor blade
The aircraft vibrated violently	Blade deformation	Replace the rotor blade
Trimmed to the end but still can't make the aircraft stable	1.blade deformation 2.bad motor	1. Replace the rotor blade 2.Replace the motor
After the impact, the aircraft was restarted and flies uncontrollably	gyroscope lost balance due to impact	Put the aircraft in a static state for 5-10 seconds to connect it by calibrating the gyroscope
A motor does not turn	motor stuck.	1. Clean up the hair rolled at the motor fan blades 2. Gently pull the wind blade upwards, remove the wind blade and calibrate the gyroscope and test it

⚠ Special note: The product has the function of air pressure setting, but it does not have the fixed-point effect. When it stops in the air without control, the product will move slightly at the same height in the air.

16. Common problem solving guidelines:

Question	Reason	Solution
The aircraft indicator light is flashing and there is no response to the operation	1. The aircraft and the remote controller are not successfully paired 2. The aircraft battery is low	1.Re-bind the aircraft with the remote controller 2.Charge the battery
Aircraft flashes intermittent sounds	1. Low battery 2. Blade deformation	1.Charge the battery 2. Replace the rotor blade
The aircraft vibrated violently	Blade deformation	Replace the rotor blade
Trimmed to the end but still can't make the aircraft stable	1.blade deformation 2.bad motor	1. Replace the rotor blade 2.Replace the motor
After the impact, the aircraft was restarted and flies uncontrollably	gyroscope lost balance due to impact	Put the aircraft in a static state for 5-10 seconds to connect it by calibrating the gyroscope
A motor does not turn	motor stuck.	1. Clean up the hair rolled at the motor fan blades 2. Gently pull the wind blade upwards, remove the wind blade and calibrate the gyroscope and test it

⚠ Special note: The product has the function of air pressure setting, but it does not have the fixed-point effect. When it stops in the air without control, the product will move slightly at the same height in the air.

Suitable for ages 14 and above

Multifunctional aircraft

user's Guide

Thank you for purchasing our product. In order to use it correctly and ensure your safety, please read this instruction manual carefully before using the product, and please keep it properly for future inquiries.

感谢您购买本公司产品，为确定操作及确保您的安全，使用产品前请仔细阅读本使用说明书，并请妥善保管，以备日后查阅。

1. 遥控器功能键及名称说明:

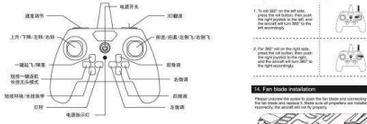

2. 遥控器电池安装说明:

1. 打开遥控器背面的电池盖，（图2A）
2. 按照电池顶的标志安装电池正确极性对齐（如 "6V"AA"电池，（图2B）
不同型号新旧或不同类型的电池。
3. 盖上电池盖。

15. Notes:

Please ensure that the battery of the aircraft is fully charged. When the battery is insufficient, the remote control distance will be affected.
2. If the battery of the aircraft is insufficient, the flight attitude will be insufficient or take off may be difficult.
3. When the aircraft is in operation or deformed, please repair it. If the rotor is broken or damaged, do not fly, otherwise it will cause injury.
4. If the aircraft encounters a bad weather or collide seriously at high altitude, which will damage the aircraft or shorten the life of the aircraft.

15. One click circumnavigation:

Press the surround button to rotate the aircraft clockwise. To cancel just press the surround button again.

13. One click flip function:

The aircraft can flip 360° through the positive operation below.
In order to better perform the return function, please make sure that the aircraft has sufficient power and is at a height of about 1.5 meters from the ground. It is best to operate the aircraft to roll over during the season, so that the aircraft can be better seen and operated. When the battery is low, the UAV will take height in the air to 5M. Please charge it in time to experience more flying fun.

1. To roll 360° on the left side, press the roll button, then push the left joystick to the left, the aircraft will turn 360° to the left accordingly.

2. For 360° roll on the right side, press the roll button, then push the right joystick to the right, the aircraft will turn 360° to the right accordingly.

14. Fan blade installation:

Please unscrew the screw in span the fan blade and connecting parts as shown in the figure below, and then remove the fan blade and connecting parts. When the fan blade and propellers are installed in the correct orientation, if they are installed incorrectly, the aircraft will not fly properly.

1. 遥控器功能键及名称说明:

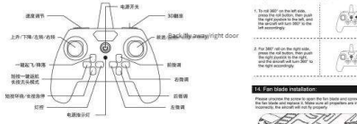

2. 遥控器电池安装说明:

1. 打开遥控器背面的电池盖，（图2A）
2. 按照电池顶的标志安装电池正确极性对齐（如 "6V"AA"电池，（图2B）
不同型号新旧或不同类型的电池。
3. 盖上电池盖。



15. Notes:

Please ensure that the battery of the aircraft is fully charged. When the battery is insufficient, the remote control distance will be affected.
2. If the battery of the aircraft is insufficient, the flight attitude will be insufficient or take off may be difficult.
3. When the aircraft is in operation or deformed, please repair it. If the rotor is broken or damaged, do not fly, otherwise it will cause injury.
4. If the aircraft encounters a bad weather or collide seriously at high altitude, which will damage the aircraft or shorten the life of the aircraft.

15. One click circumnavigation:

Press the surround button to rotate the aircraft clockwise. To cancel just press the surround button again.

13. One click flip function:

The aircraft can flip 360° through the positive operation below.
In order to better perform the return function, please make sure that the aircraft has sufficient power and is at a height of about 1.5 meters from the ground. It is best to operate the aircraft to roll over during the season, so that the aircraft can be better seen and operated. When the battery is low, the UAV will take height in the air to 5M. Please charge it in time to experience more flying fun.

1. To roll 360° on the left side, press the roll button, then push the left joystick to the left, the aircraft will turn 360° to the left accordingly.

2. For 360° roll on the right side, press the roll button, then push the right joystick to the right, the aircraft will turn 360° to the right accordingly.

14. Fan blade installation:

Please unscrew the screw in span the fan blade and connecting parts as shown in the figure below, and then remove the fan blade and connecting parts. When the fan blade and propellers are installed in the correct orientation, if they are installed incorrectly, the aircraft will not fly properly.

4. Speed switch:

The aircraft is powered on by default in low-speed mode, and you can switch the speed through the speed control button on the remote control. Low-speed mode, two "Di-Di-" sounds for medium speed mode, and three "Di-Di-Di" sounds for high-speed mode.

9. Headless Mode:

1. Start and setup:
During turning, the front of the aircraft defaults to the front of headless mode; if the aircraft is deviated from the front after a collision or flight, please restart the aircraft and adjust it to the direction you want to perform turning; after the headless mode is turned on, the aircraft will flash three times slowly.
Press and hold the headless mode button (Figure 9), the aircraft body light will flash, and the aircraft enter the headless mode.
2. Headless mode:
Press and hold the headless mode button again (the remote control emits a "beep"), the body light will turn on and exit the headless mode.

As shown in the figure above, in the headless mode, no matter which direction the aircraft's nose turns, the remote controller's direction stick is pushed forward the aircraft will fly to the direct of the aircraft's nose face to when turning

10. One-key return home:

When the aircraft flies a long distance, you can use the return-to-home function to recall the aircraft.
During the flight, press the return button to start the return home. After the return home is
successful, the aircraft will hover in the air. Press any button on the remote control to exit the return mode and turn off the
control. During the return home process, move the right joystick back and forth or press
the return button to cancel the return home.

11. One-key emergency stop:

When the aircraft undoes during flight and cannot be controlled, please press and hold the one-button emergency stop button on the remote control immediately, and use the emergency stop function button to realize emergency stop, which is not available under normal circumstances.

5. Pre-flight preparation instructions:

1.Aircraft syncing
Install the battery of the aircraft and the remote controller, turn on the power switch of the aircraft, and place the aircraft on a level ground after the fuselage light flashes. Turn on the power switch of the remote controller, and the light on the remote controller flashes. When the aircraft light and the remote controller light are always on, the pairing is completed. The product must be operated according to the steps, otherwise it is easy to cause poor connection and poor control.

2. To calibrate the gyroscope operation:
After successful syncing between the aircraft and the remote controller, the aircraft can be calibrated.
Push the throttle stick to the lower left corner, and the direction stick to the lower right corner. During this time, you will see the LED release the two positions of the remote control, and the calibration is completed.
⚠ Special Note: If the aircraft takes off and can not fly at right angle can also be corrected by calibrating the gyroscope.

⚠ Note: The calibration must be on the horizontal plane to complete the calibration.

3. One-key take-off and landing
Brief press the one-key take-off button on the remote control, the aircraft will automatically rise to a height of about 1 meter and hover in the air. Brief press the one-key landing button again, and the aircraft will automatically land slowly and land on the ground.

⚠ Note: One-key landing must be on a horizontal plane, because landing on a fixed altitude function that is not on a horizontal plane will cause the aircraft to deviate and fly randomly.

⚠ Tips for flight stage: Alignment (refer to 5.1) → Gyro calibration (refer to 5.2) → Glide takeoff (refer to 5.3) → One-key take/One-key landing (refer to 5.3)

6. 操控方法:

按飞行器机身高度300M的位置，飞行器会受到自身部件因温度的影响而受干扰，造成向
"俯冲现象"，当无人机高度在此时，对他反应的影响越大。

1. Remote control function keys and name description:

2. Remote control battery installation instructions:

1. Open the battery cover on the back of the remote control. (Picture A)
2. Install 4 pieces of 1.5V"AA"batteries according to the positive and negative indications inside the battery compartment. (Picture B)
Do not mix old or new or different types of batteries.
3. Close the battery cover.

5. Pre-flight preparation instructions:

1.Aircraft syncing
Install the battery of the aircraft and the remote controller, turn on the power switch of the aircraft, and place the aircraft on a level ground after the fuselage light flashes. Turn on the power switch of the remote controller, and the light on the remote controller flashes. When the aircraft light and the remote controller light are always on, the pairing is completed. The product must be operated according to the steps, otherwise it is easy to cause poor connection and poor control.

2. To calibrate the gyroscope operation:
After successful syncing between the aircraft and the remote controller, the aircraft can be calibrated.
Push the throttle stick to the lower left corner, and the direction stick to the lower right corner. During this time, you will see the LED release the two positions of the remote control, and the calibration is completed.
⚠ Special Note: If the aircraft takes off and can not fly at right angle can also be corrected by calibrating the gyroscope.

⚠ Note: The calibration must be on the horizontal plane to complete the calibration.

3. One-key take-off and landing
Brief press the one-key take-off button on the remote control, the aircraft will automatically rise to a height of about 1 meter and hover in the air. Brief press the one-key landing button again, and the aircraft will automatically land slowly and land on the ground.

⚠ Note: One-key landing must be on a horizontal plane, because landing on a fixed altitude function that is not on a horizontal plane will cause the aircraft to deviate and fly randomly.

⚠ Tips for flight stage: Alignment (refer to 5.1) → Gyro calibration (refer to 5.2) → Glide takeoff (refer to 5.3) → One-key take/One-key landing (refer to 5.3)

6. 操控方法:

按飞行器机身高度300M的位置，飞行器会受到自身部件因温度的影响而受干扰，造成向
"俯冲现象"，当无人机高度在此时，对他反应的影响越大。

1. Remote control function keys and name description:

2. Remote control battery installation instructions:

1. Open the battery cover on the back of the remote control. (Picture A)
2. Install 4 pieces of 1.5V"AA"batteries according to the positive and negative indications inside the battery compartment. (Picture B)
Do not mix old or new or different types of batteries.
3. Close the battery cover.

12. 一键环绕

按按环绕键，飞行器绕对时针转，按消除按环绕键

13. 一键翻滚

1. 左侧360° 翻滚
按左翻滚键，再推左摇杆向左推，飞行器会向左翻滚。

2. 右侧360° 翻滚
按按翻滚键，再推右摇杆向右推，飞行器会向右翻滚。

14. 风叶安装:

请根据下图所示，旋下风叶连接件螺钉，确保所有的螺丝安装在正确的方位，若安装错误，

12. 一键环绕

按按环绕键，飞行器绕对时针转，按消除按环绕键

13. 一键翻滚

1. 左侧360° 翻滚
按左翻滚键，再推左摇杆向左推，飞行器会向左翻滚。
2. 右侧360° 翻滚
按按翻滚键，再推右摇杆向右推，飞行器会向右翻滚。

14. 风叶安装:

请根据下图所示，旋下风叶连接件螺钉，确保所有的螺丝安装在正确的方位，若安装错误，

1. 遥控器功能键及名称说明:

2. 遥控器电池安装说明:

1. 打开遥控器背面的电池盖，（图2A）
2. 按照电池顶的标志安装电池正确极性对齐（如 "6V"AA"电池，（图2B）
不同型号新旧或不同类型的电池。
3. 盖上电池盖。

15. Notes:

Please ensure that the battery of the aircraft is fully charged. When the battery is insufficient, the remote control distance will be affected.
2. If the battery of the aircraft is insufficient, the flight attitude will be insufficient or take off may be difficult.
3. When the aircraft is in operation or deformed, please repair it. If the rotor is broken or damaged, do not fly, otherwise it will cause injury.
4. If the aircraft encounters a bad weather or collide seriously at high altitude, which will damage the aircraft or shorten the life of the aircraft.

15. One click circumnavigation:

Press the surround button to rotate the aircraft clockwise. To cancel just press the surround button again.

13. One click flip function:

The aircraft can flip 360° through the positive operation below.
In order to better perform the return function, please make sure that the aircraft has sufficient power and is at a height of about 1.5 meters from the ground. It is best to operate the aircraft to roll over during the season, so that the aircraft can be better seen and operated. When the battery is low, the UAV will take height in the air to 5M. Please charge it in time to experience more flying fun.

1. To roll 360° on the left side, press the roll button, then push the left joystick to the left, the aircraft will turn 360° to the left accordingly.

2. For 360° roll on the right side, press the roll button, then push the right joystick to the right, the aircraft will turn 360° to the right accordingly.

14. Fan blade installation:

Please unscrew the screw in span the fan blade and connecting parts as shown in the figure below, and then remove the fan blade and connecting parts. When the fan blade and propellers are installed in the correct orientation, if they are installed incorrectly, the aircraft will not fly properly.

4. 安全切换：打开即可进入速度状态 ▲特别提示：切不可用作飞行中紧急刹车，否则会坠机

1. 警告：请选择空旷宽阔的场地，充分了不能的条件下进行飞行，飞行时请远离人群、树木、电线、高大建筑物，和其他可能发射信号、易影响遥控器正常工作的干扰源。不要在密集人群上方进行飞行。请勿"飞行"时向下"飞行"时向上"飞行"时向左向右"飞行"时向前"飞行"时向后"飞行"。
2. 为了确保您顺利地安全飞行，请仔细阅读本说明书，并按照步骤操作。
3. 为了保证您的无线电安全，请在每次飞行前检查遥控器电池是否充足。
4. 在开始飞行时，请一定将电量调至"开"位置。
5. 为了保证您的无线电安全，请在每次飞行前检查遥控器电池是否充足。
6. 在开始飞行时，请一定将电量调至"开"位置。
7. 飞行中请勿关闭遥控器。
8. 请勿在遥控器上方放置物品。
9. 请勿在遥控器上方放置物品。
10. 请勿在遥控器上方放置物品。
11. 请勿在遥控器上方放置物品。

5. 飞行准备说明:

1.Aircraft syncing
Install the battery of the aircraft and the remote controller, turn on the power switch of the aircraft, and place the aircraft on a level ground after the fuselage light flashes. Turn on the power switch of the remote controller, and the light on the remote controller flashes. When the aircraft light and the remote controller light are always on, the pairing is completed. The product must be operated according to the steps, otherwise it is easy to cause poor connection and poor control.

2. To calibrate the gyroscope operation:
After successful syncing between the aircraft and the remote controller, the aircraft can be calibrated.
Push the throttle stick to the lower left corner, and the direction stick to the lower right corner. During this time, you will see the LED release the two positions of the remote control, and the calibration is completed.
⚠ Special Note: If the aircraft takes off and can not fly at right angle can also be corrected by calibrating the gyroscope.

⚠ Note: The calibration must be on the horizontal plane to complete the calibration.

3. One-key take-off and landing
Brief press the one-key take-off button on the remote control, the aircraft will automatically rise to a height of about 1 meter and hover in the air. Brief press the one-key landing button again, and the aircraft will automatically land slowly and land on the ground.

⚠ Note: One-key landing must be on a horizontal plane, because landing on a fixed altitude function that is not on a horizontal plane will cause the aircraft to deviate and fly randomly.

⚠ Tips for flight stage: Alignment (refer to 5.1) → Gyro calibration (refer to 5.2) → Glide takeoff (refer to 5.3) → One-key take/One-key landing (refer to 5.3)

6. 操控方法:

按飞行器机身高度300M的位置，飞行器会受到自身部件因温度的影响而受干扰，造成向
"俯冲现象"，当无人机高度在此时，对他反应的影响越大。

1. Remote control function keys and name description:

2. Remote control battery installation instructions:

1. Open the battery cover on the back of the remote control. (Picture A)
2. Install 4 pieces of 1.5V"AA"batteries according to the positive and negative indications inside the battery compartment. (Picture B)
Do not mix old or new or different types of batteries.
3. Close the battery cover.

1.遥控器功能键及名称说明:

2. 遥控器电池安装说明:

1. 打开遥控器背面的电池盖，（图2A）
2. 按照电池顶的标志安装电池正确极性对齐（如 "6V"AA"电池，（图2B）
不同型号新旧或不同类型的电池。
3. 盖上电池盖。

15. Notes:

Please ensure that the battery of the aircraft is fully charged. When the battery is insufficient, the remote control distance will be affected.
2. If the battery of the aircraft is insufficient, the flight attitude will be insufficient or take off may be difficult.
3. When the aircraft is in operation or deformed, please repair it. If the rotor is broken or damaged, do not fly, otherwise it will cause injury.
4. If the aircraft encounters a bad weather or collide seriously at high altitude, which will damage the aircraft or shorten the life of the aircraft.

15. One click circumnavigation:

Press the surround button to rotate the aircraft clockwise. To cancel just press the surround button again.

13. One click flip function:

The aircraft can flip 360° through the positive operation below.
In order to better perform the return function, please make sure that the aircraft has sufficient power and is at a height of about 1.5 meters from the ground. It is best to operate the aircraft to roll over during the season, so that the aircraft can be better seen and operated. When the battery is low, the UAV will take height in the air to 5M. Please charge it in time to experience more flying fun.

1. To roll 360° on the left side, press the roll button, then push the left joystick to the left, the aircraft will turn 360° to the left accordingly.

2. For 360° roll on the right side, press the roll button, then push the right joystick to the right, the aircraft will turn 360° to the right accordingly.

14. Fan blade installation:

Please unscrew the screw in span the fan blade and connecting parts as shown in the figure below, and then remove the fan blade and connecting parts. When the fan blade and propellers are installed in the correct orientation, if they are installed incorrectly, the aircraft will not fly properly.

4. 安全切换：打开即可进入速度状态 ▲特别提示：切不可用作飞行中紧急刹车，否则会坠机

1. 警告：请选择空旷宽阔的场地，充分了不能的条件下进行飞行，飞行时请远离人群、树木、电线、高大建筑物，和其他可能发射信号、易影响遥控器正常工作的干扰源。不要在密集人群上方进行飞行。请勿"飞行"时向下"飞行"时向上"飞行"时向左向右"飞行"时向前"飞行"时向后"飞行"。
2. 为了确保您顺利地安全飞行，请仔细阅读本说明书，并按照步骤操作。
3. 为了保证您的无线电安全，请在每次飞行前检查遥控器电池是否充足。
4. 在开始飞行时，请一定将电量调至"开"位置。
5. 为了保证您的无线电安全，请在每次飞行前检查遥控器电池是否充足。
6. 在开始飞行时，请一定将电量调至"开"位置。
7. 飞行中请勿关闭遥控器。
8. 请勿在遥控器上方放置物品。
9. 请勿在遥控器上方放置物品。
10. 请勿在遥控器上方放置物品。
11. 请勿在遥控器上方放置物品。

5. 飞行准备说明:

1.Aircraft syncing
Install the battery of the aircraft and the remote controller, turn on the power switch of the aircraft, and place the aircraft on a level ground after the fuselage light flashes. Turn on the power switch of the remote controller, and the light on the remote controller flashes. When the aircraft light and the remote controller light are always on, the pairing is completed. The product must be operated according to the steps, otherwise it is easy to cause poor connection and poor control.

2. To calibrate the gyroscope operation:
After successful syncing between the aircraft and the remote controller, the aircraft can be calibrated.
Push the throttle stick to the lower left corner, and the direction stick to the lower right corner. During this time, you will see the LED release the two positions of the remote control, and the calibration is completed.
⚠ Special Note: If the aircraft takes off and can not fly at right angle can also be corrected by calibrating the gyroscope.

⚠ Note: The calibration must be on the horizontal plane to complete the calibration.

3. One-key take-off and landing
Brief press the one-key take-off button on the remote control, the aircraft will automatically rise to a height of about 1 meter and hover in the air. Brief press the one-key landing button again, and the aircraft will automatically land slowly and land on the ground.

⚠ Note: One-key landing must be on a horizontal plane, because landing on a fixed altitude function that is not on a horizontal plane will cause the aircraft to deviate and fly randomly.

⚠ Tips for flight stage: Alignment (refer to 5.1) → Gyro calibration (refer to 5.2) → Glide takeoff (refer to 5.3) → One-key take/One-key landing (refer to 5.3)

6. 操控方法:

按飞行器机身高度300M的位置，飞行器会受到自身部件因温度的影响而受干扰，造成向
"俯冲现象"，当无人机高度在此时，对他反应的影响越大。

1. Remote control function keys and name description:

Power switch
Spe

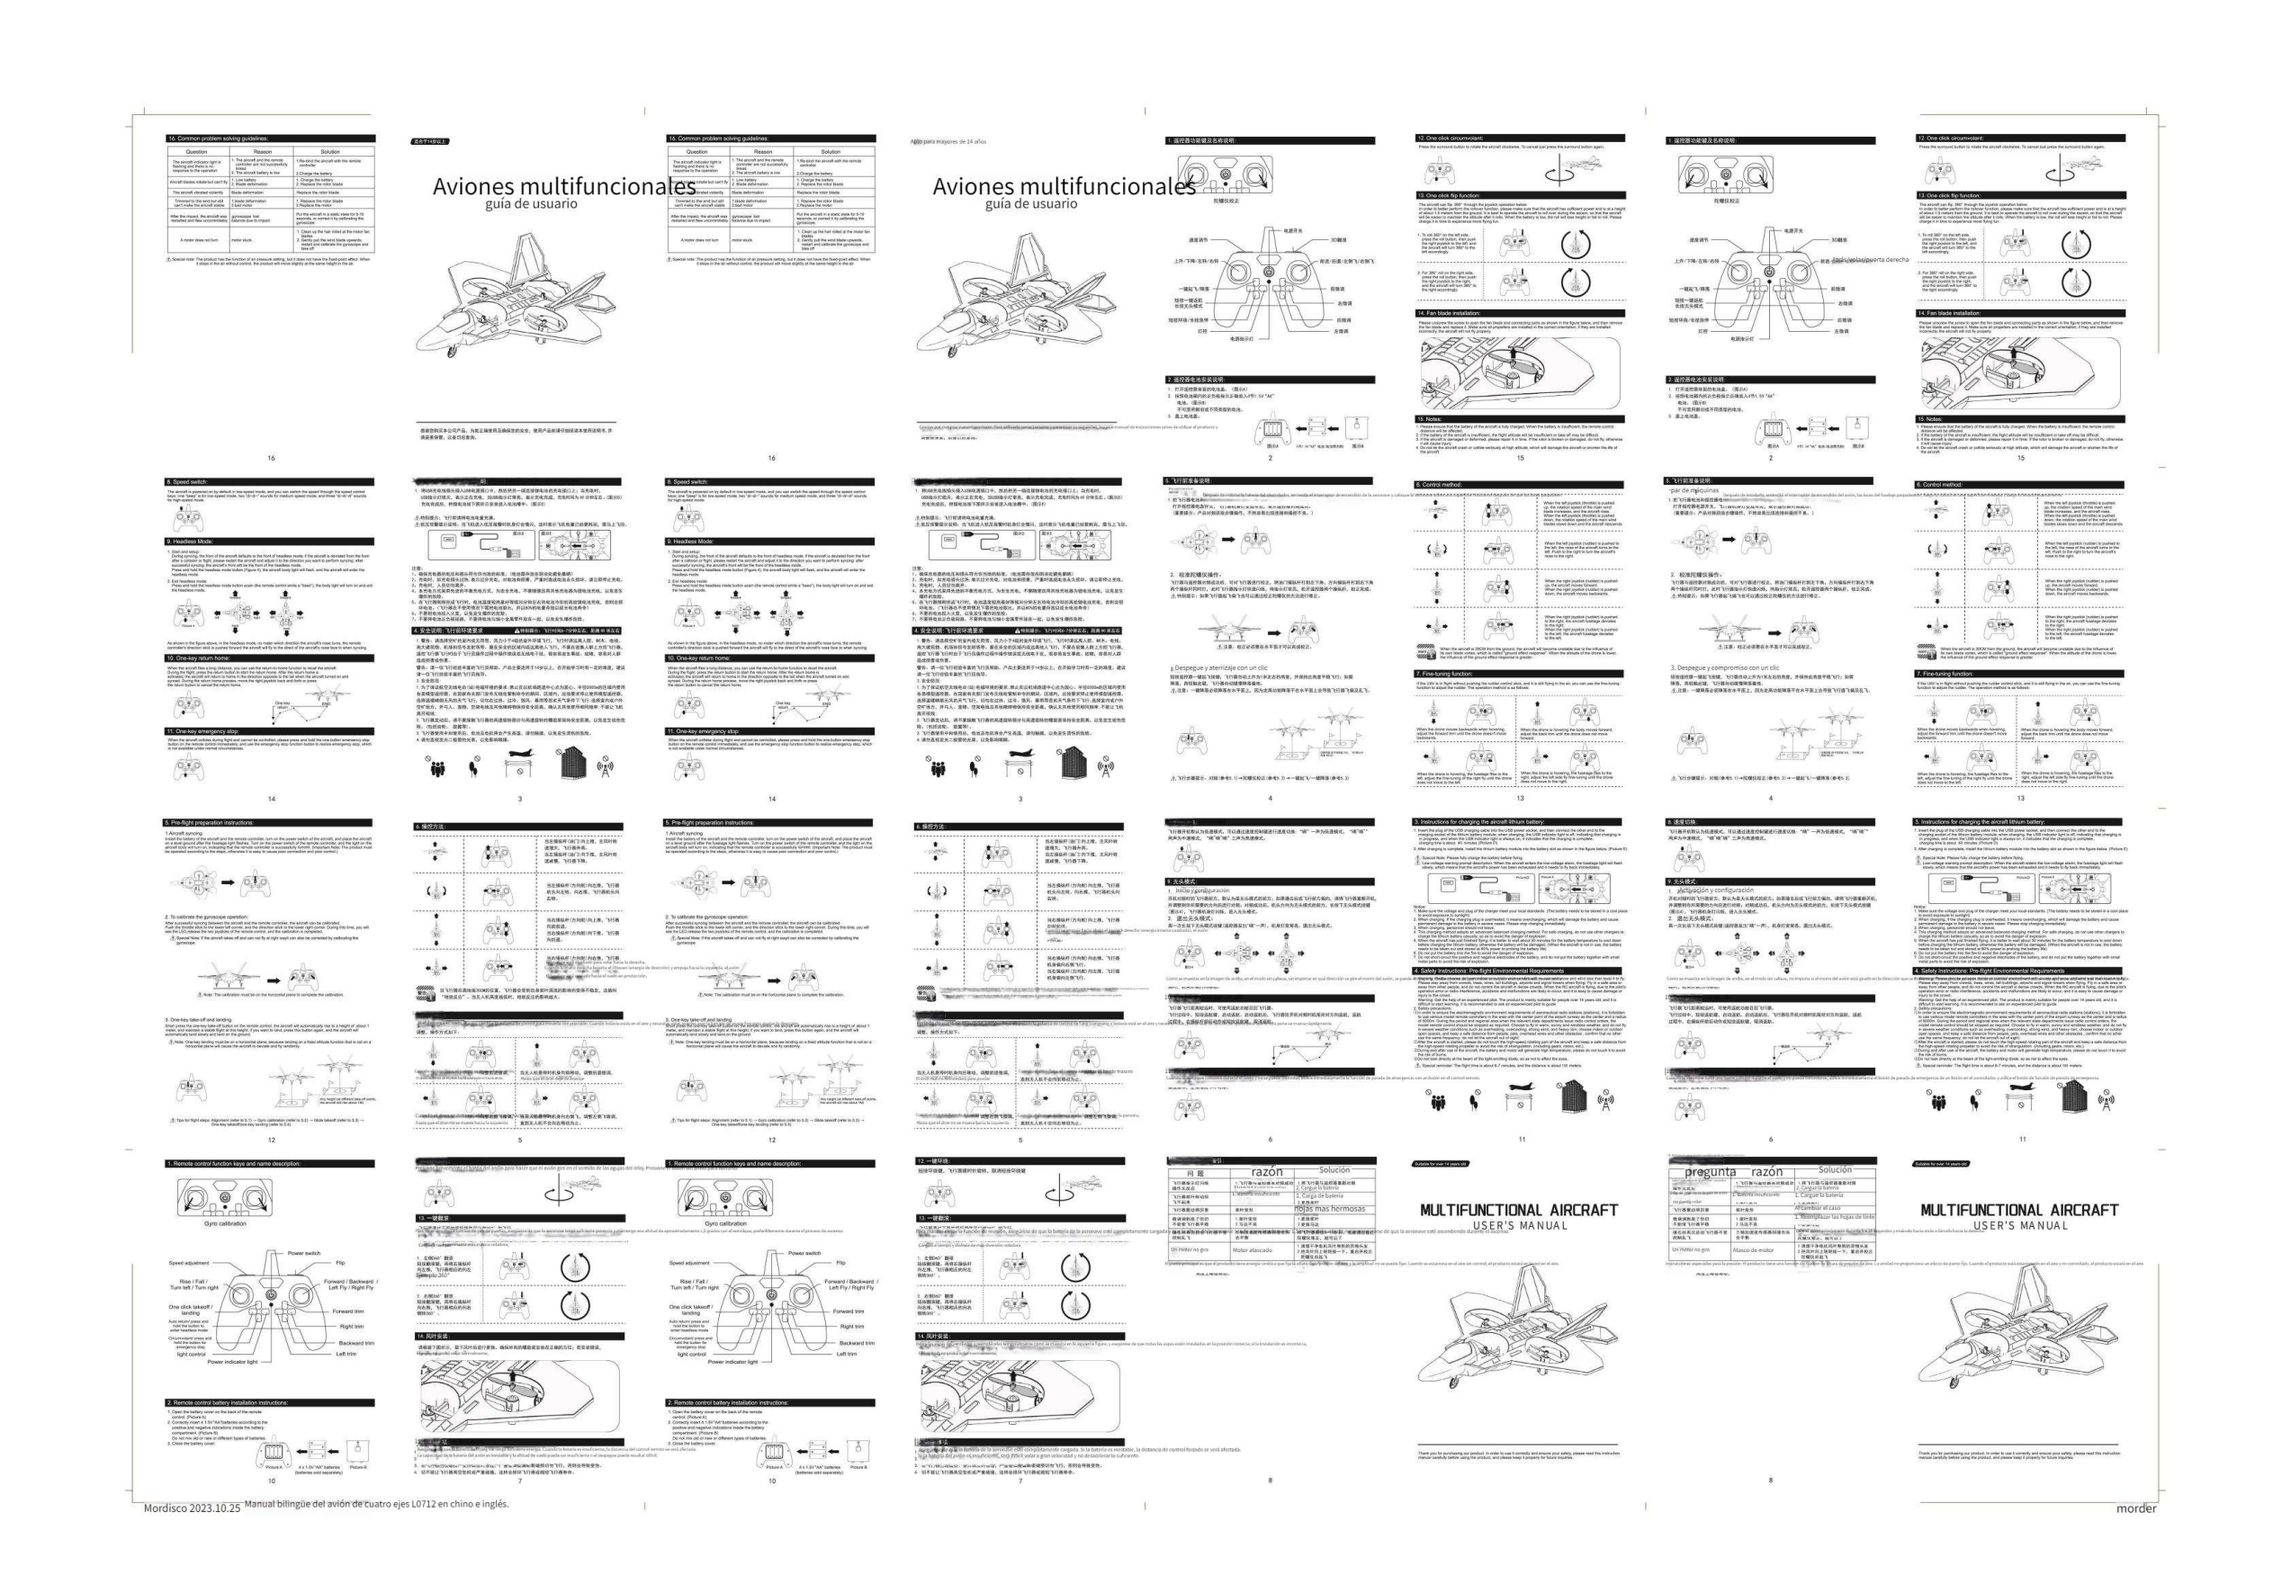

Mordisco 2023.10.25 Manual bilingüe del avión de cuatro ejes L0712 en chino e inglés. morder